

52A INTERIOR 1996

CONTENTS

ADHESIVE

SPECIAL TOOL

INSTRUMENT PANEL

REMOVAL AND INSTALLATION

DISASSEMBLY AND REASSEMBLY

FLOOR CONSOLE

REMOVAL AND INSTALLATION

TRIMS

REMOVAL AND INSTALLATION

HEADLINING

INSTALLATION SERVICE POINT

INSIDE REAR VIEW MIRROR

REMOVAL SERVICE POINT

FRONT SEAT

REMOVAL AND INSTALLATION

INSTALLATION SERVICE POINT

DISASSEMBLY AND REASSEMBLY

REAR SEAT

REMOVAL AND INSTALLATION

REMOVAL SERVICE POINT

INSTALLATION SERVICE POINTS

FRONT SEAT BELT

REMOVAL AND INSTALLATION

INSPECTION

REAR SEAT BELT

REMOVAL AND INSTALLATION

WARNINGS REGARDING SERVICING OF SUPPLEMENTAL RESTRAINT SYSTEM (SRS) EQUIPPED VEHICLES

WARNING!

- (1) Improper service or maintenance of any component of the SRS, or any SRS-related component, can lead to personal injury or death to service personnel (from inadvertent firing of the air bag) or to the driver and passenger (from rendering the SRS inoperative).
- (2) Service or maintenance of any SRS component or SRS-related component must be performed only at an authorized MITSUBISHI dealer.
- (3) MITSUBISHI dealer personnel must thoroughly review this manual, and especially its [GROUP 52B – Supplemental Restraint System \(SRS\)](#) before beginning any service or maintenance of any component of the SRS or any SRS-related component.

NOTE

The SRS includes the following components: SRS-ECU, SRS warning lamp, air bag module, clock spring and interconnecting wiring. Other SRS-related components (that may have to be removed/installed in connection with SRS service or maintenance) are indicated in the table of contents by an asterisk (*).